


GREASE MAX[®]

Installation Instructions

Read before using!

please follow these 4 simple steps for trouble-free **GREASE MAX[®]** operation

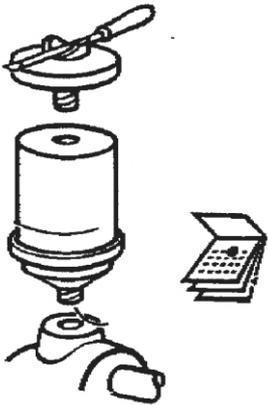

1. Screw in the starter cap by hand & tighten down firmly (you will hear the seals break while doing this). Use a screw driver or similar to tighten completely.

2. Record change over date.

3. Pre-grease bearing before first installation.

4. Install **GREASE MAX[®]** hand tight into grease point.

Do NOT open **GREASE MAX[®]**! Do NOT remove **GREASE MAX[®]** until the change over date!

- **GREASE MAX[®]** is designed to operate at an average environmental temperature of 25° C. Refer to brochure for information about using **GREASE MAX[®]** at different temperatures. Allow 8 - 40 hours for operation to commence depending on **GREASE MAX[®]** type.
- If **GREASE MAX[®]** is to be installed with extension lines, use min. 8 mm D tubing. The maximum recommended length are 1,5 metres.
- Do not screw the starter cap into **GREASE MAX[®]** until ready to activate the unit.
- If fittings are required, refer to the list on the reverse of this page.
- Wear protective gloves when activating **GREASE MAX[®]**.
- Dispose of used **GREASE MAX[®]** in the industrial waste bin.

COLOUR CODES: Colour of the activator in the base of **GREASE MAX[®]** and the starter cap

White:	1 month unit	Type: 01W
Blue:	3 months unit	Type: 03B
Red:	6 months unit	Type: 06R
Grey:	12 months unit	Type: 12G

⇒ **Note: colour of starter cap must match colour of activator in base of **GREASE MAX[®]****

WARNING: **GREASE MAX[®]** uses a small quantity of potassium hydroxide as part of it's operation. If **GREASE MAX[®]** is opened or accidentally damaged and the liquid escapes onto the skin or eyes, wash with water and seek medical advice. Refer to material safety data sheet.

GREASE MAX[®] is a quality product according to the German safety regulations of appliances and is proofed among other things corresponding to the specifications PPP 52007A:1996, TRGS 220:2011.